

Horizontal Blind Installation Instructions


Tools you will need:

Measuring Tape
Level
1/4" Magnetic Nut Driver
Cordless Drill
Screwdriver
Ladder/Step Stool



Hardware you will receive:


Installation Brackets
Mounting Screws
Valance Clips
Small Screws

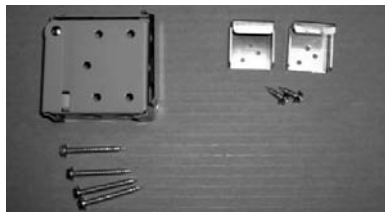

Contents may include the following, depending upon the mounting options you have chosen:

3/8" Spacer Block
Support Bracket
Metal Extension Bracket
Valance Return Brackets & Corner Inserts
Hold Down Brackets
Cord Cleat

Hold the Installation Bracket in place. Set brackets to proper depth in the window sill and install the brackets. (Valance type will determine the depth of the bracket - CV or CVR). Insert the screws into the 1/4" magnetic nut driver and mount brackets to the wall.

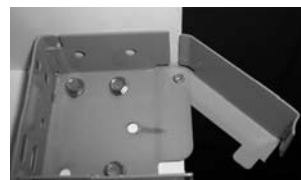

Keeping bracket flap in "UP position". Insert the headrail into the bracket by sliding it in the open face of bracket. Close the flap to lock the blind securely into place.



Valance installation

Locate groove on back of valance, place clip sideways in groove and turn clip to lock into correct position.



Attach valance back to allow clips to slide into headrail. Once clips are in headrail, slightly pull valance downward until clips sit flush.

Attaching valance returns (If needed)

Place valance return insert into slot in back of return. Then slide insert with the attached return into adjoining slot on the back of the valance.



Operating your new blinds

Each cord with individual tassels will tilt the slats in alternate directions.

The lift cord is used to raise and lower the blinds. Pull the cord away from the window to lift the blind and lock in position. Pull toward the center to release the blind from the locked position.



The slats must be open when raising or lowering the blind.

Care and cleaning of your blinds

Tilt slats almost all the way in one direction. Dust may be easily brushed off using a feather duster or soft cloth. Turn the slats in the other direction and repeat. Never immerse your blinds in water.