

Custom blinds are made to the specifications of your window opening dimensions. Measurements must be precise to ensure proper fit.

- Before you begin measuring for your new blinds, choose whether you would like them to be Inside Mount (IM) or Outside Mount (OM). Inside Mount blinds are installed inside the window opening for a flush, clean look. Outside Mount blinds overlap the window opening and can give optimal light control and privacy.

- Measure the window diagonally from the top corners to the bottom corners. Refer to Figure 1. If the two diagonal dimensions are not exactly the same then you have an out-of-square window and it may be necessary to use an outside mount for easier installation. Also check for obstructions around and within the window opening. This may also help you decide whether you should have an Inside Mounted or an Outside Mounted blind.

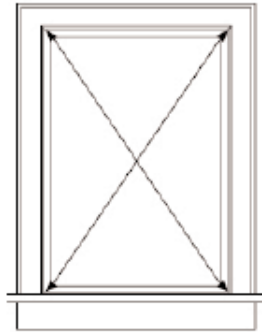



Figure 1

- Please indicate clearly if there are any side-by-side windows.
- Spacer brackets are available upon request.
- Record the width first, then height to the nearest 1/8".

## Inside Mount

The window opening must have enough clearance to support the installation brackets. To avoid installation problems, please make sure your window has enough depth for an Inside Mount.

- Measure the width of the window in three places: top, center and bottom. Use the smallest measurement as your ordering width. If the three measurements are far off from each other, then Outside Mount is recommended.

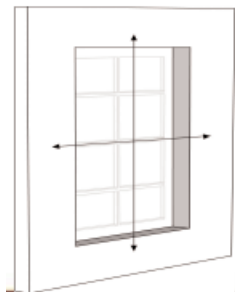

- Measure the height of the window in three places: left, center and right. Use the longest height measurement for your ordering height for maximum light coverage.



- A standard deduction will be taken from your ordered width. Please refer to the 'finished dimensions' section on each product page for the standard deduction. There will be no standard deductions or additions to your ordered height.

## Outside Mount

- Measure your desired finished width and height. Please refer to Figure 2.



Figure 2

- The blind should overlap the frame of the window opening at least 2" on all sides to maximize light coverage and for proper installation bracket attachment.
- Please take any obstructions around your window opening into consideration and make the necessary additions or subtractions to your measurements.
- We will not make any default additions or deductions, so please give exact finished measurements.